

Protect your farm's most important assets



Building instructions for OctoPaddock 20 x 48 m


- Decide your starting point. Attach a mason line close to the ground and run it to the end or the corner of the paddock.
- Position the two gate posts where the gate will be placed (3.25 m).

Mark where the in-between fence posts will be placed. The centre-to-centre distance between the fence posts on the two longer sides is 2.7 m. The shorter side without the gate has a centre-to-centre distance of 2.5 m. Shorter side with gate. The opening between the gate posts is 3.25 m. The centre-to-centre distance between the remaining fence posts is 2.45 m.

- Mark the above-ground part of the post, 1500 mm from the top of the post. (1800 mm for gate posts)
- Dig or drive down the post until the markings reach the ground level.
- Fasten a mason line 100 mm down from the top of the posts.
- Position the rail with the upper edge level with the mason line.
- Fasten the rail using two screws in each post.

Lower the mason line to 700 mm from the top of the post and fasten it under the rail with the upper edge level with the mason line.

Place the joint between the posts. When you reach a corner or an opening, cut the rail and continue with the remaining piece of rail on the next side. Fasten each rail joint with two screws.

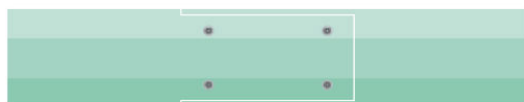

How to join the rails.

List of materials

55 posts 100 x 2000 mm
99 rails 1001/2 x 3000 mm
2 gate posts 120 x 2500 mm
2 gates with band hinges 2 x 1500 mm
400 self-tapping screws 4.0 x 40
240 self-tapping screws 6.0 x 90

Each rail builds fencing of 2750 mm long.

